




# Samsung MV900F Flash Bulb Assembly Replacement

This guide shows how to replace the Samsung MV900F Flash Bulb Assembly.

Written By: Justin Smith

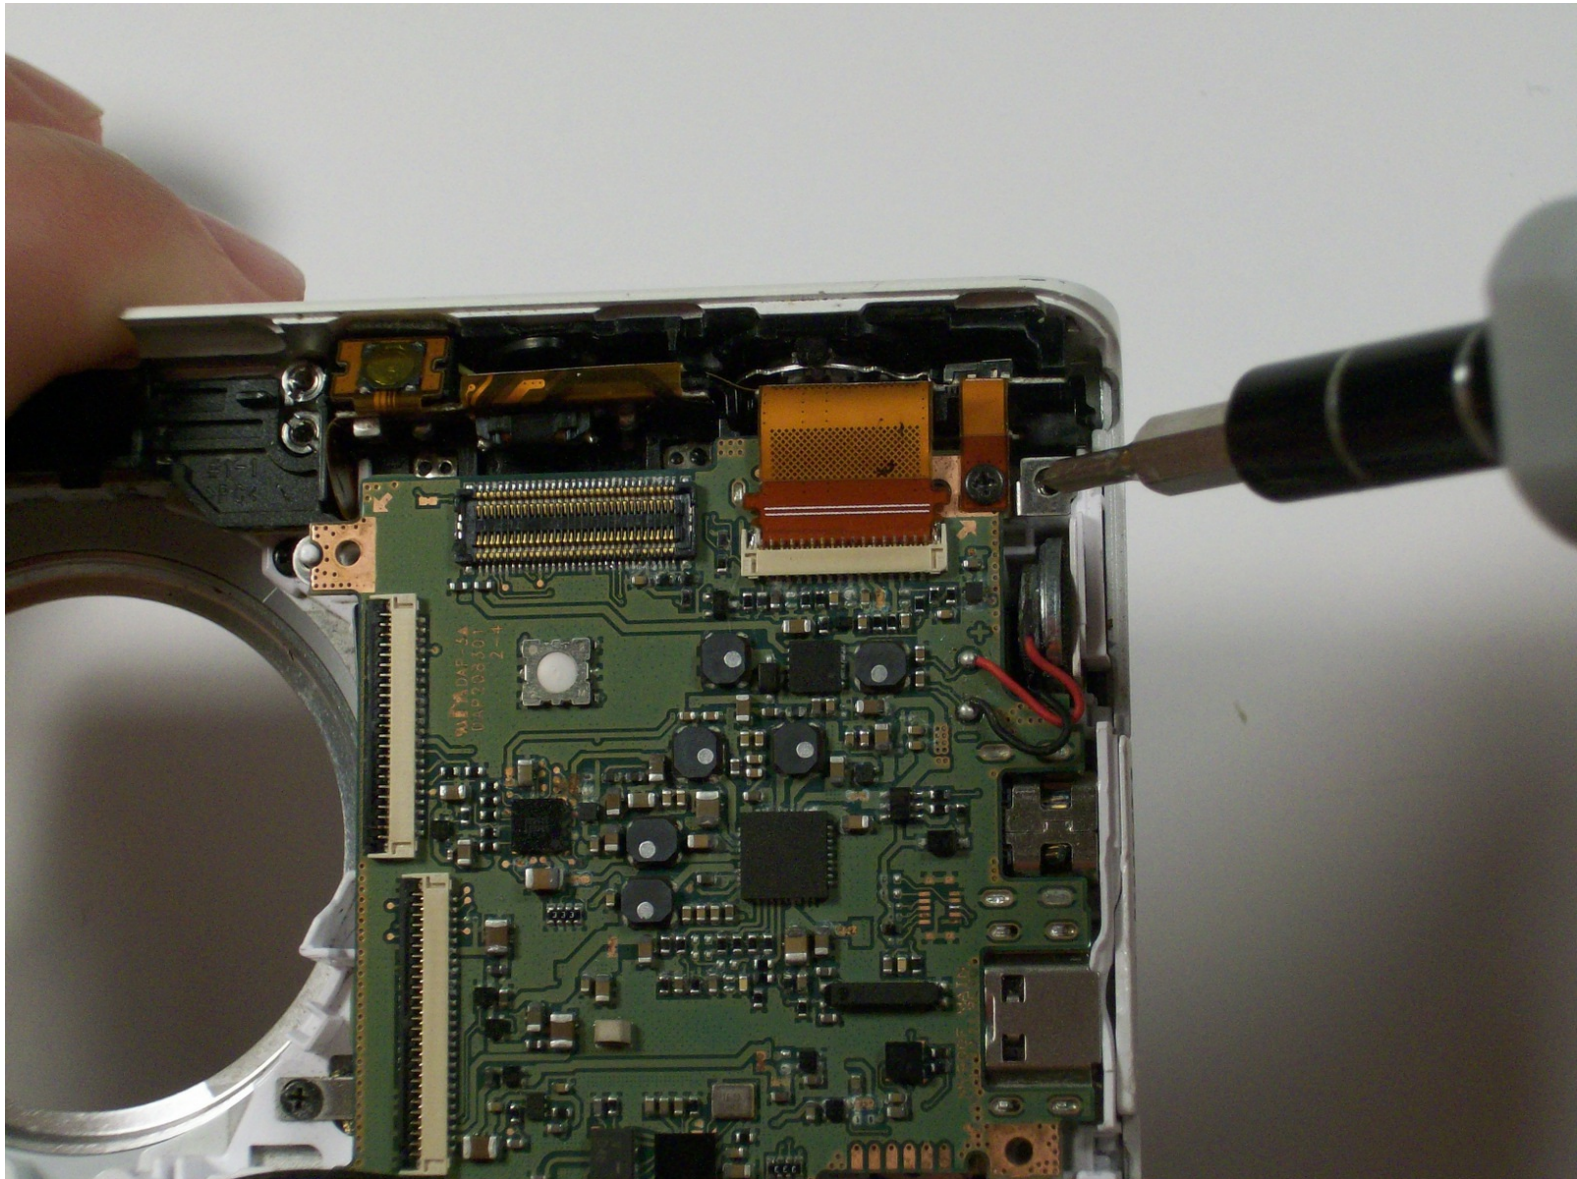



## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)



## PARTS:


- [Samsung MV900F flash bulb assembly](#) (1)

## Step 1 — Battery



- Slide the lock towards the middle of the camera, in the same direction of the arrow.

## Step 2

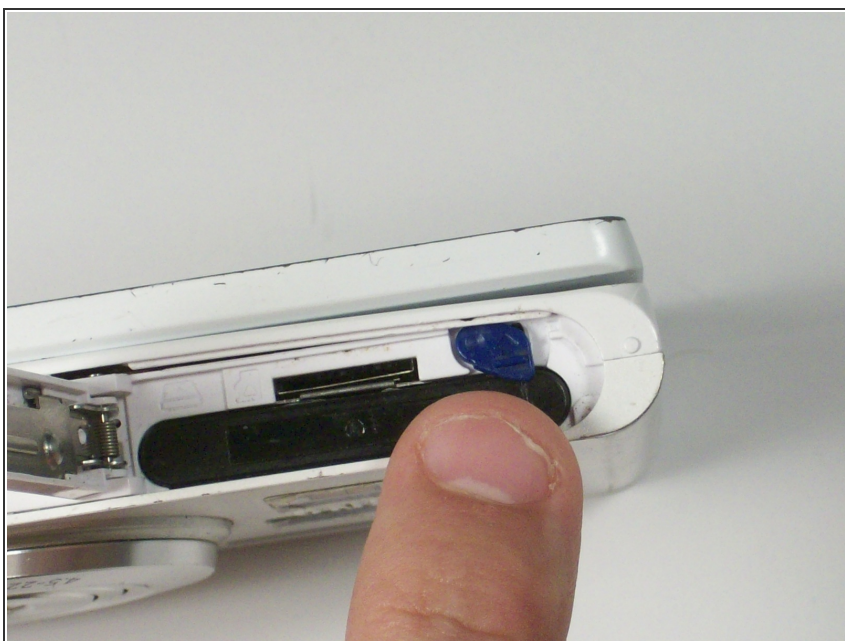

- Push the blue battery holder up in the direction of the arrow.




### Step 3




- Pull the battery out of the battery slot.

### Step 4 — Screen

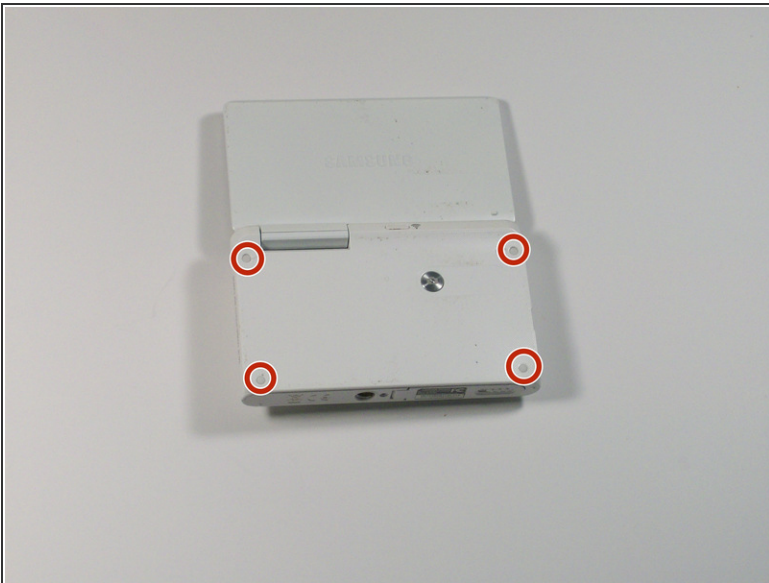


- Use tweezers to remove the four rubber screw covers.

## Step 5

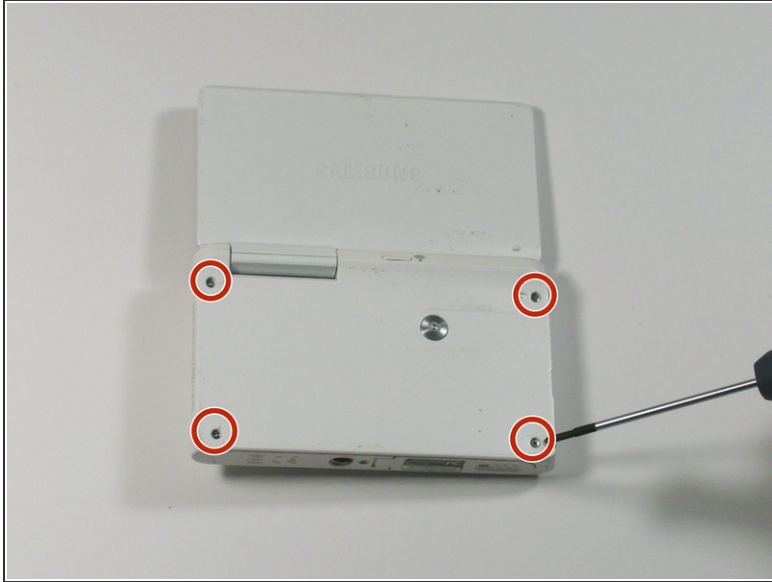

- Remove the four Phillips 2.381 mm screws on back side of camera and one Phillips 2.381 mm screw on the bottom of the camera, using a Phillips #00 screwdriver.


## Step 6

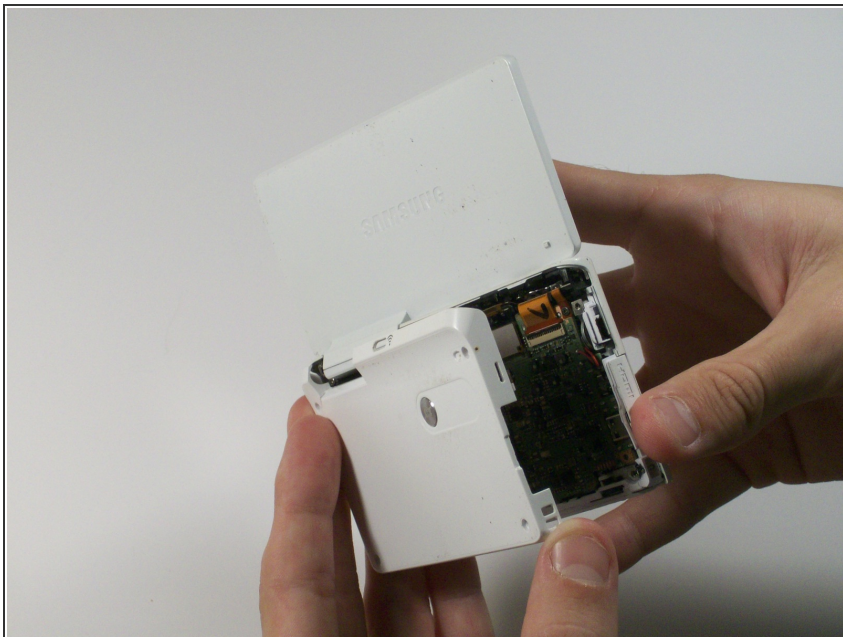

- Remove the back casing by just carefully pulling the casing off of the camera.




## Step 7

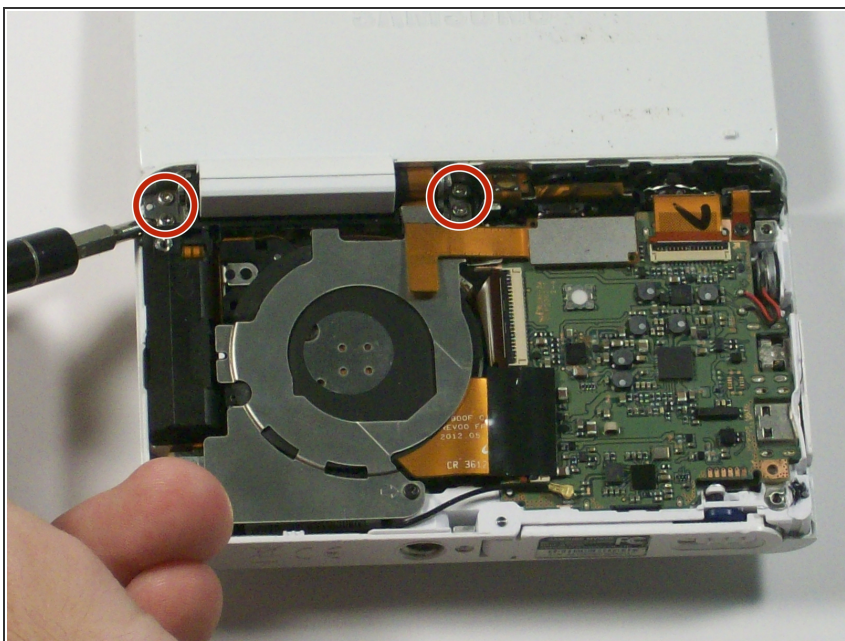


- Use the Phillips #00 screw driver to remove the four 2.381 mm screws next to the screen hinge.

## Step 8

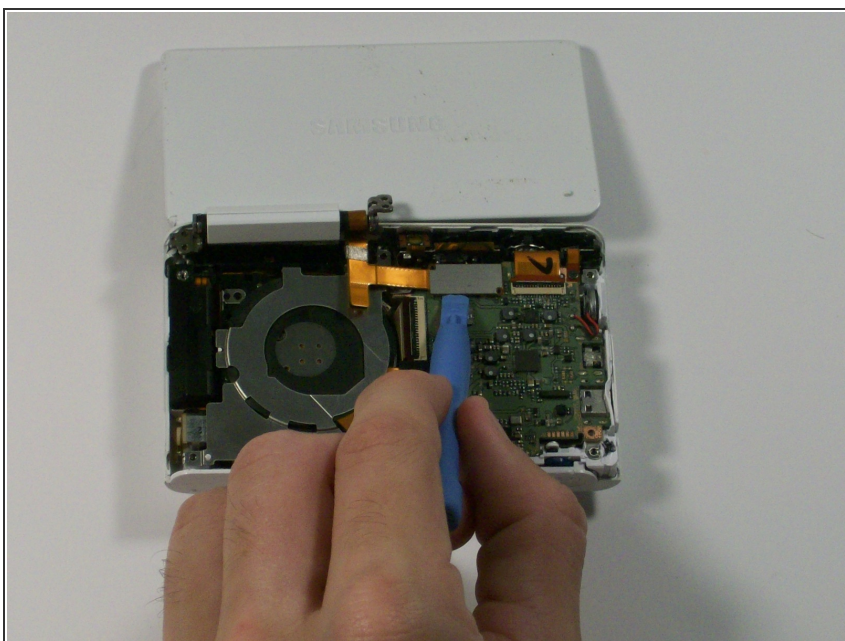


- Use plastic opening tool to disconnect screen connector from the control board.

## Step 9

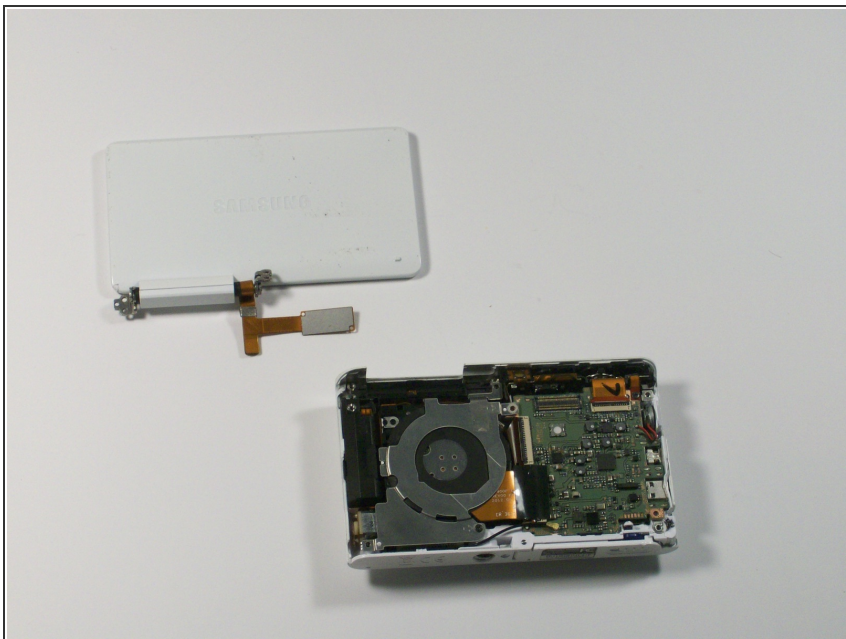

- Remove the old screen.


## Step 10 — Lens Assembly

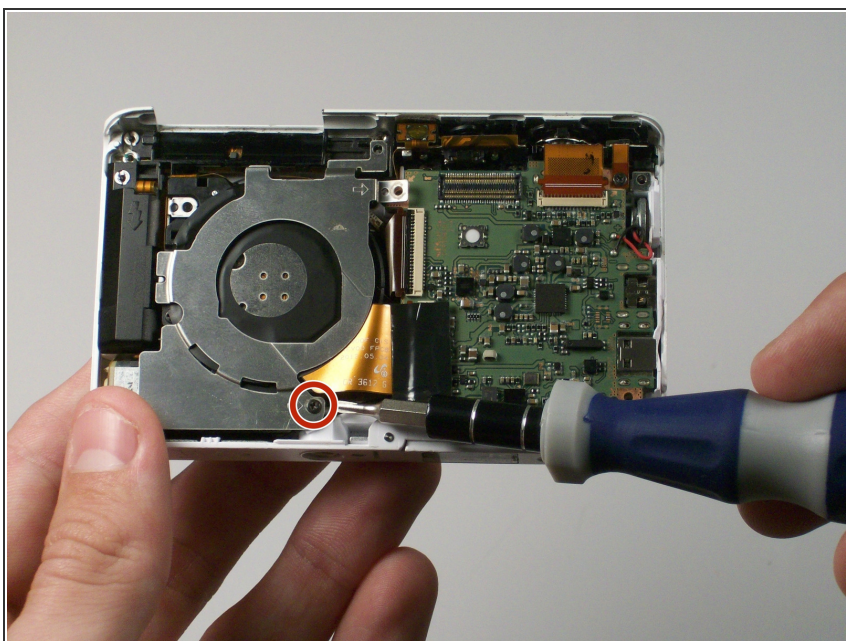

- Remove the 2.381 mm screw with a Phillips #00 screwdriver.




## Step 11

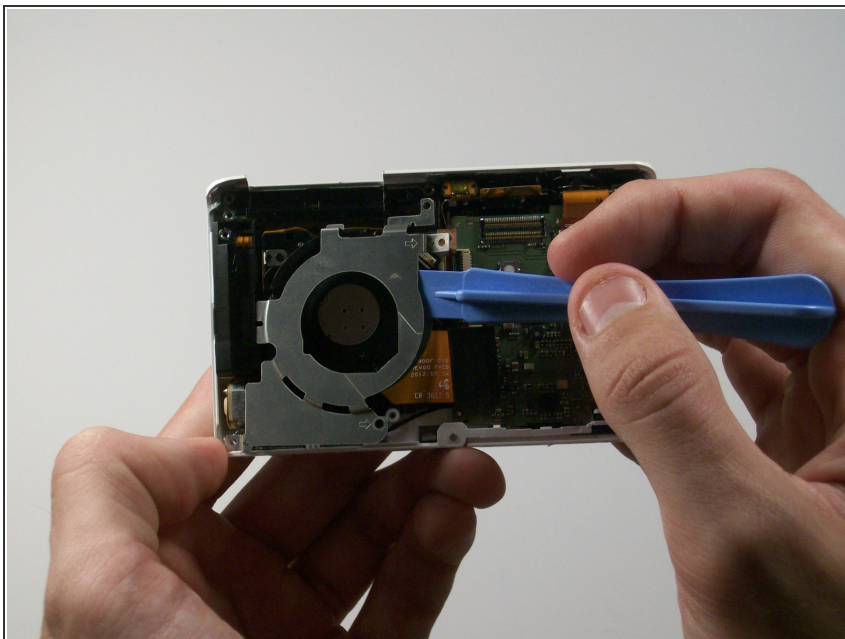

- Use the plastic opening tool to remove the silver metal lens cover.


## Step 12

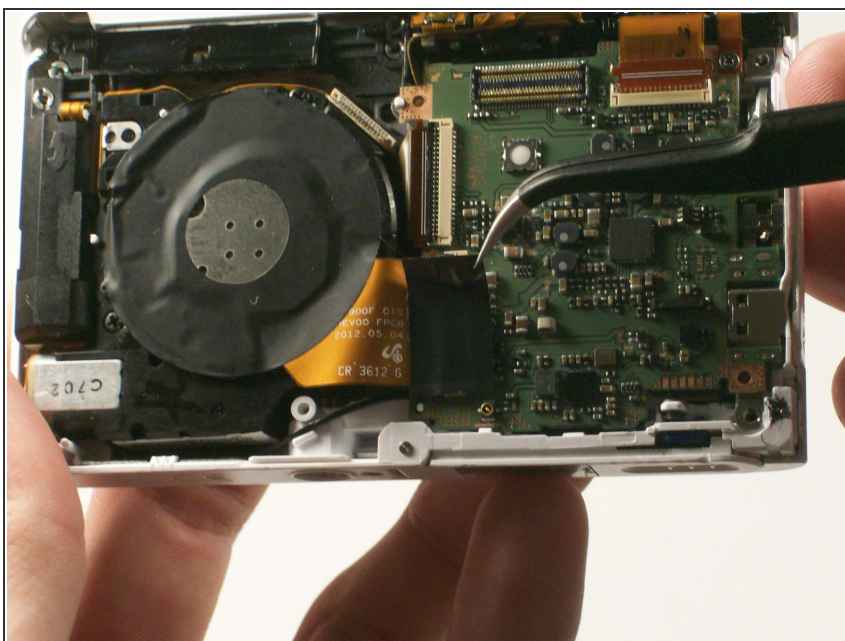

- Use the tweezers to remove the black electrical tape covering the copper connector to the control board.





## Step 13

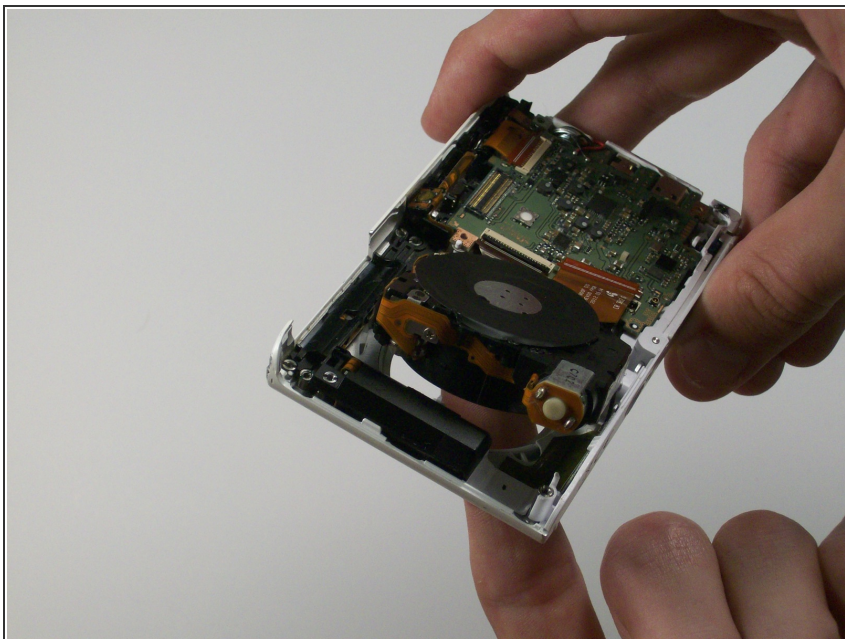



- From the front of the camera, push the lens through the back of the camera.

## Step 14

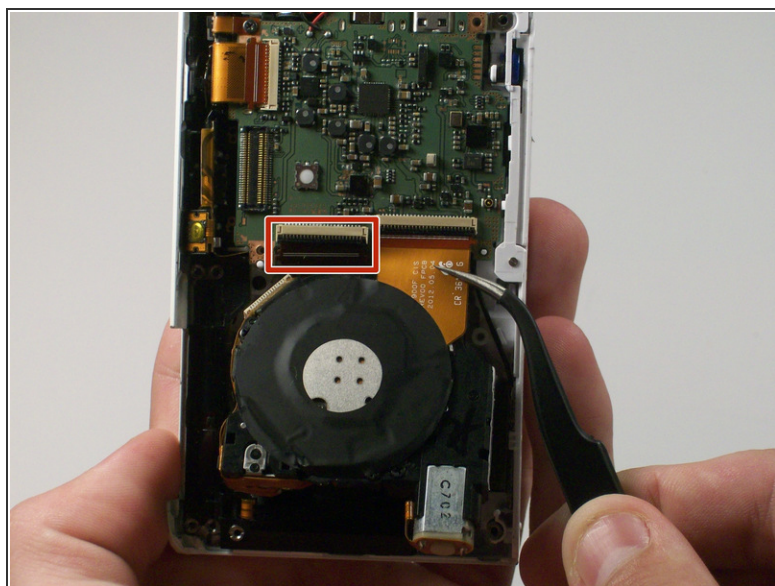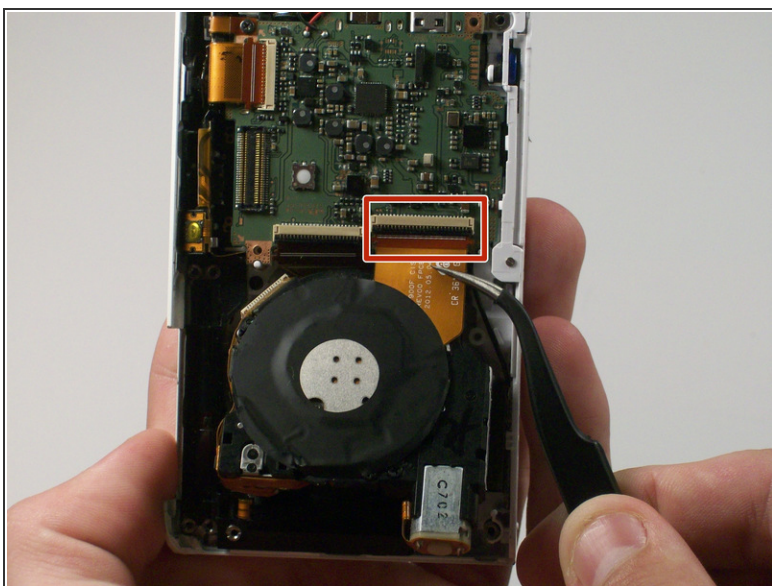


- Use a pair of tweezers to flip up the black retaining bar on each of the two ZIF connectors.

## Step 15

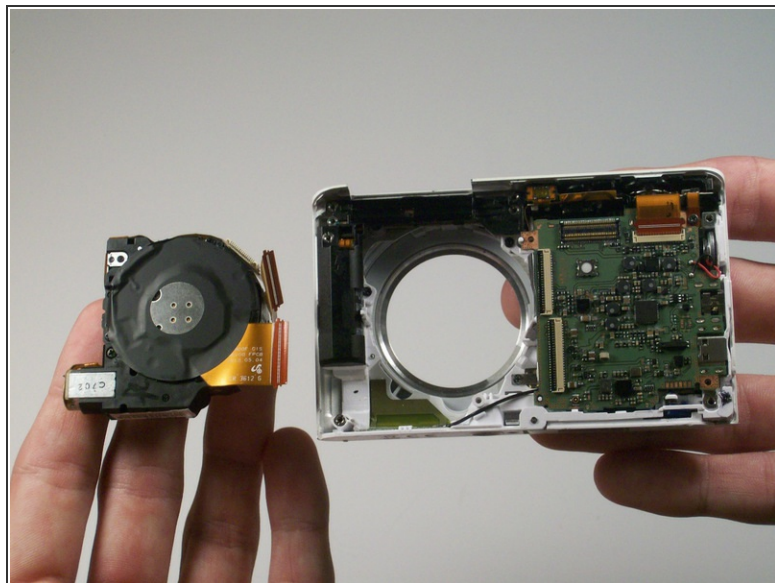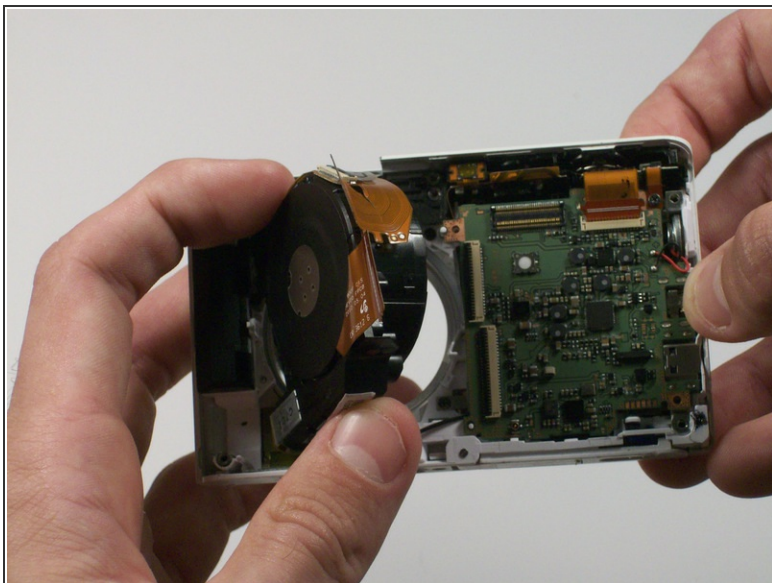

- Remove the lens assembly from the camera.


## Step 16 — Flash Bulb Assembly

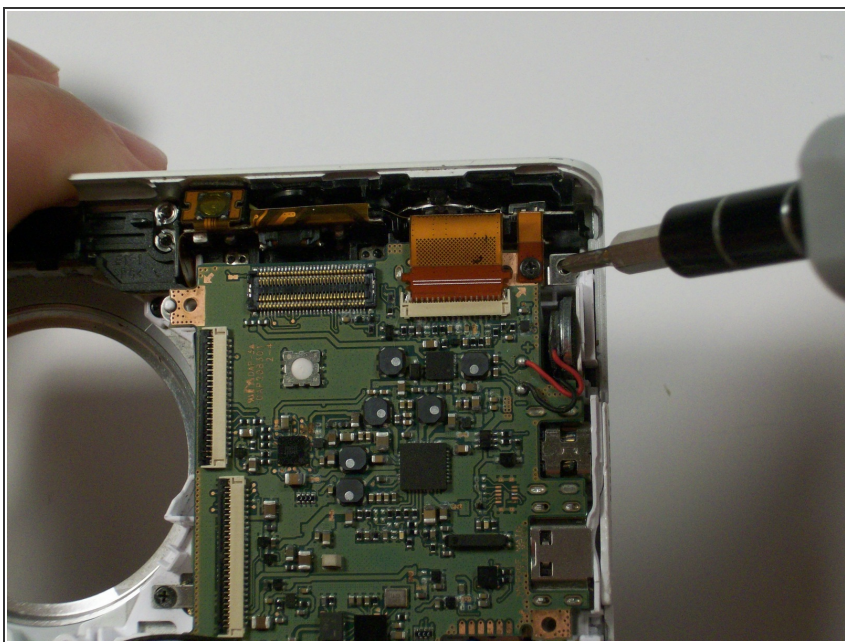

- Remove the 2.381 mm screw that is holding the copper to the control board with a Phillips #00 screw driver.




## Step 17

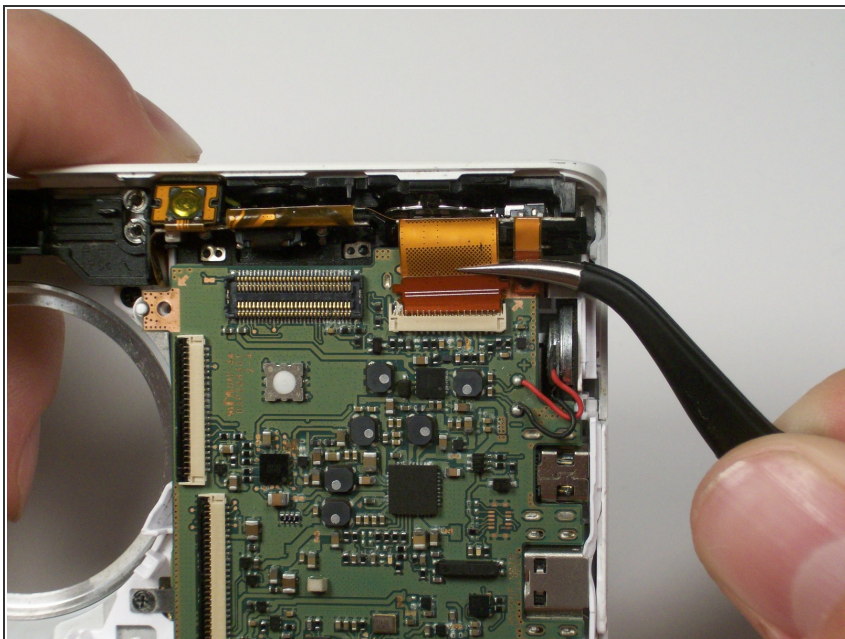


- Use tweezers to pull copper connector from the control board.

## Step 18

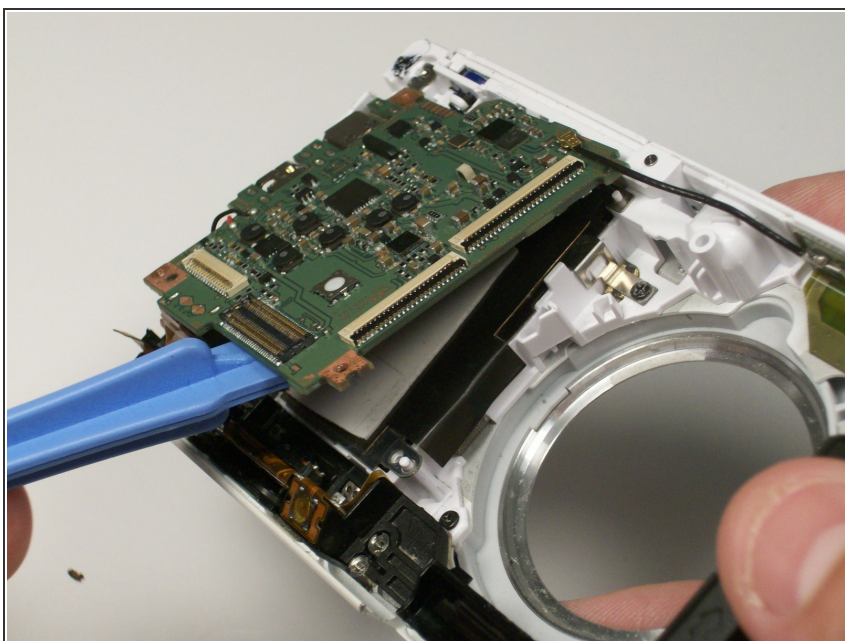

- Use the plastic opening tool to pry the control board up, thus allowing the flash bulb assembly to be removed.

## Step 19

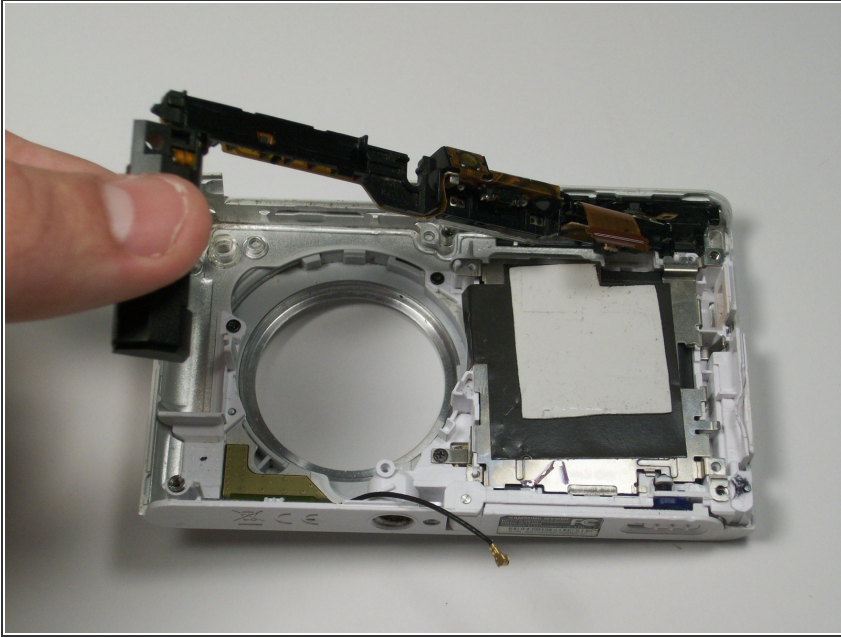

- Beginning with the battery on the side, gently pull upwards to remove the entire flash bulb assembly.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-05 07:11:55 PM.